



Kirby Morgan Dive Systems, Inc.®

1430 Jason Way, Santa Maria, California 93455


Phone: 805/928-7772 Fax: 805/928-0342

www.kirbymorgan.com e-mail: kmgsi@kirbymorgan.com


Bulletin #6 of 2015. May 4, 2015

Maintenance & Repair Bulletin

This bulletin is to serve as a reminder of an important difference in installation procedure between the port retainer screws for the fiberglass helmets verses those of the stainless steel helmets.

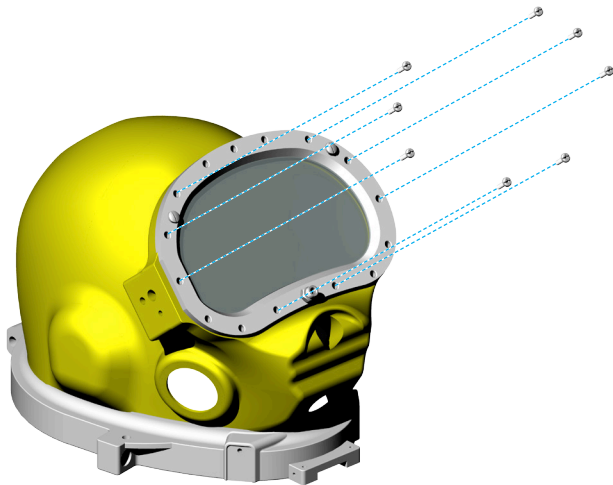

No Loctite®

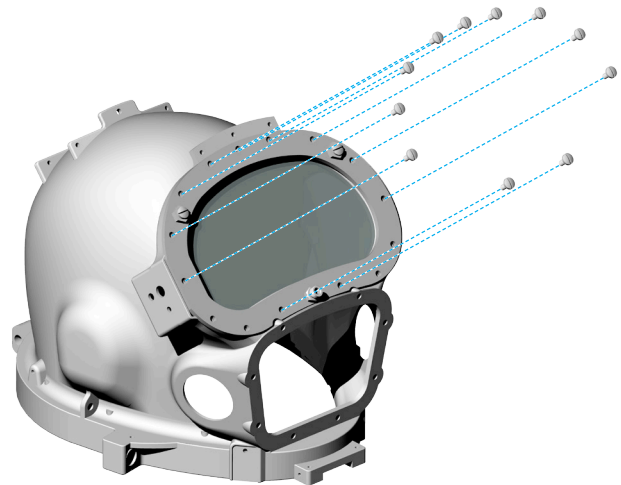

With Loctite®

When reinstalling the port retainer screws on fiberglass helmets, DO NOT use Loctite® thread locker.

When reinstalling the port retainer screws on stainless steel helmets, Loctite® 248 Medium Strength, non-drip thread locker is used.

The above and more detailed information on procedure, torques and thread locker requirements will also be found in the Operations & Maintenance Manuals.

Please contact your local KMDSI dealer or e-mail KMDSI at sales@kirbymorgan.com for more information.