



# Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com

## Part #525-776 Lens Retainer Kit




Part #	Description	Qty
520-538	Oral Nasal Lens Retainer	1
530-923	Wire Mount	1

### Instructions:

1. Take the Lens Retainer Frame to your local Optometrist and have them make and install your Rx Prescription Lenses into the Frame.

### Optometrist Notes:

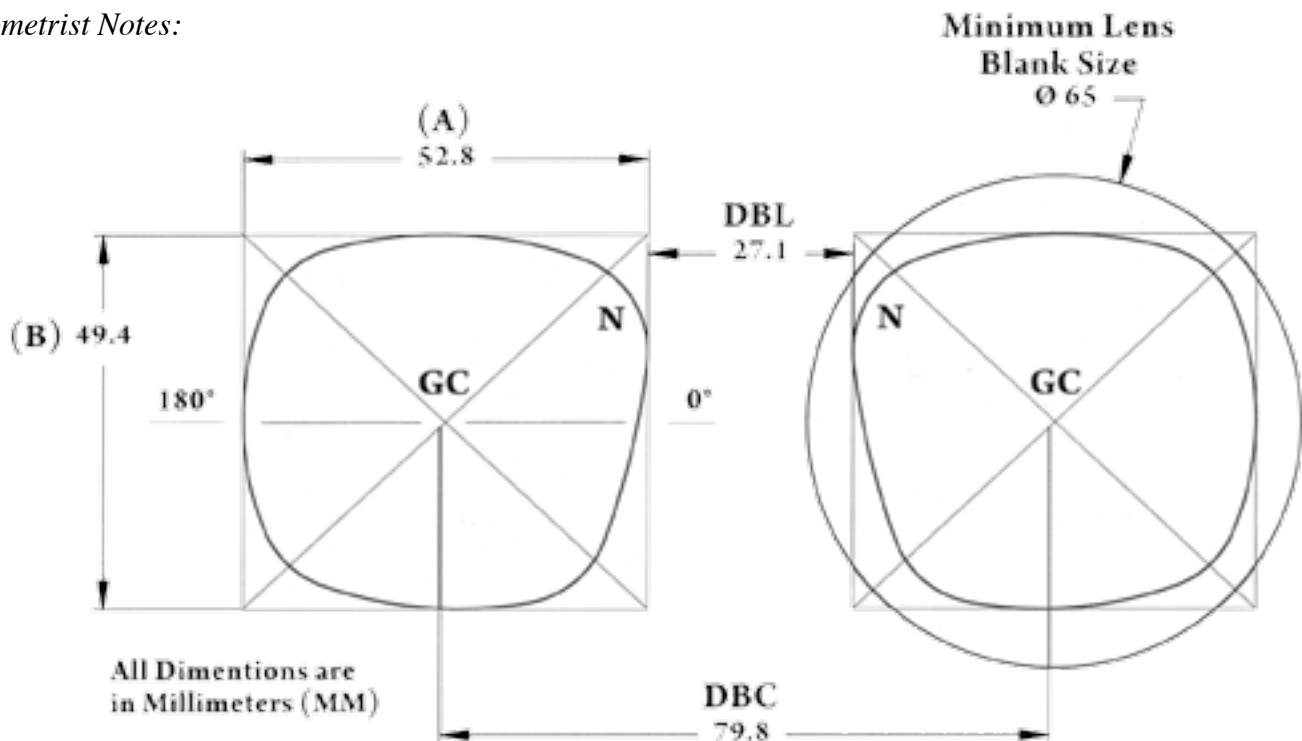


# Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com

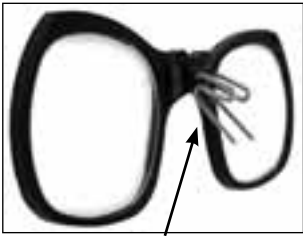

*Mount Wire "legs" down*



*Push against a firm surface until you feel a "click"*

2. Once the Lenses have been installed, attach the Mount Wire, P/N 530-923 onto the Retainer Frame, P/N 520-538 by inserting it into the slot on the front of the Frames.

**Note:** Make sure that the "legs" are oriented facing downward.



*Put "legs" into the receiving holes of the oral nasal, P/N 510-747 and push all the way on.*



*510-747 Oral Nasal*

3. Next mount the Lens Retainer onto the Oral Nasal by insert the "legs" of the Mount Wire into the receiving holes located on top of the nose area of the Oral Nasal (510-747).



*Use a Screwdriver to Raise the Frames*



*Or a Pliers to Lower the Frames*

**Note:** Some slight adjustments can be made to the positioning of the frames if needed.

4. Mount Oral Nasal into Helmet or Mask. See Owners Manual for instructions, which can be found on our website at [www.kirbymorgan.com](http://www.kirbymorgan.com).